



#### Scramble PIN code

Anti-peeping password recognition system. Supports up to 16 digits virtual password(real password 6 - 8 digits). For example, if the actual password is 88888, then you can enter "123458888854321" and press OK to open the door.

#### Normal open mode

By default this function is disabled. If you need to turn it on, just open the door and then press "9" and OK to activate it(auto-locking function is disabled now). You can press "0" and OK to disable it again(autolocking function is enabled now).



### **Reset the lock**

As is shown in the figure on the right, open the battery cover and press the reset key with a pin for more than 5 seconds.

#### **Technical parameter**

Unlocking mode: Fingerprint / password / card and other methods Sensor type: Semi-conductor fingerprint sensor Recognition speed: <0.5s Failure rate: <0.0001% Fingerprint capacity: 100 User capacity: 1000 Remote control capacity: 36(optional) Working temperature: <25°C ~ 65°C Working humidity: 5 ~ 95%(no condensation) Power supply: 1.5V AA alkaline batteries x4 Emergency power supply: MicroUSB Current: Static <50uA, dynamic <200mA Application: 8 - 12mm frameless glass door (door gap 4 - 15mm) 30 - 120mm framed glass door / wooden door

## Quick guide

1. By default it is experience mode, and any fingerprint, password or card can unlock the door. Long press "CM" button to enter the menu.

2. Please add administrators first(max. 3 administrators)

5. Battery compartment

6. Knob

3. After the door is open, press "9" and OK to activate the normal open mode, and press "0" and OK to disable the normal open mode.

4. Press the reset button for 5 seconds and then there is a voice prompt "Initialize the system". After this the lock is initialized.

## TUYA Smart APP(Optional)



Please download "TUYA Smart" APP from APP Store on iOS or Android devices. After installation, please register yourself with your mobile phone number.

1. Add device 1) Set the lock to WIFI configuration mode in Menu -> System Set -> Network Config: a. Turn on WIFI.

b. Select "WIFI Config".

2) From the home page of TUYA APP select "Add Device" and the APP will find the lock. Choose the right device to add.

3) Select 2.4G WIFI network and input password, then press "Next".

NOTE: TUYA does not support 5GHz WIFI, please use 2.4GHz WIFI only.

17:38 4		17-30 4			10 Y II)	17:30 4	10 V I
RS =	0	<	Add	Device	8	Add Device	De
Cozy Home		Searchi has entit	ing for nearby de lered pairing mod	vices. Make sure ; o.	rour device	2 device(s) being added	Add
🤆 32°C		Discover	rina devices.			WIFI Smart Lock	
Excellent Excellent Outdoor PM2.5 Outdoor Ar Qu.	74.0% Outdoor Humid	4.4			Add	Tap to add this device	G
All Devices Meeting Ro	om Bedroor ····					- 168	
			Add M	lanually		Tap to add this device	
		Electrical		Socket			
		Lighting					
		Sensors	n Plug	n Socket	n Sockat		
No devices		Lama	(BLE+Wi-Pi)	(85-74)	(Zigbee)		
No device.	_	Home Ap			11		
Add Devic	•	Small Home Appliances	Bocket (BLE)	Socket (NB-IoT)	Sockat (other)		
		Kitchen Appliances		Power Strip			
		Exercise & Health	* VV	* (VV)	* . V.V.		
<b>n</b>	ଟ ହା	Camera & Lock	Power Strip (BLE+Wi-Fi)	Power Strip (WI-FI)	Power Strip (Zigitee)		
Harne Scene	Smort Me	Gateway					



2. Remote unlock When someone presses the doorbell button on the lock, TUYA APP will receive an message. Press this message and there will be a popup dialog, select "Confirm" and the door can be opened remotely. You may see the remote opening record in the APP.



**APP Download** 







Please search" UULOCK" or " UULOCKSMART" in Apple AppStore.

#### 3. Member management

3. Member management You can add member from the member management page, and add fingerprint, password or card information to each member. For example, Tom has registered his fingerprint, password and card in the device with ID 1, and then we can add them to the APP(all of them use the same ID 1). When next time he opens the door, the APP will receive an message with the weak blick details. unlocking details.

Deneet memoer type		<	Users	+	<	Edit member info	rmation Save
Family		Family	Others			0	
After accord		66-10****	*** 82	Unbound			
2.This user will be able to control and use all p	roducta				Account	86-18 *****	82
within the home group Immediately add					Name		
					86-18	82	
Others					Fingerprint U	lock	
After adding					- Hingk	riprint Uniock	
1.This user only appears in the member list of t current door lock and only corresponds to the opening record	the door				•		Add the fingerprint
2.ma user is unable to gain operational and administrative rights for any device					Pessaoro Un	aned Linkock	
3.To grant the user access to the took, use the function	57.874						
Immediately add					•		Add a password
					Card Unlock		
					Card	Unlock	15
					0		Add a door card
		-			rate secops	PLAT CAPACITY	_
17-43 4	#** <b>=</b> 0	17:43 4	11121-024	tti ⊕ ■)	09:49 <b>√</b>	Descrip	1月4日 180
17-43 √ Member Detail	tt! ♥ ■) Edit	17:43 √ <	WIFI LOCK	ut <sup>er</sup> ♥■) ∠	09:49 ⊀ <	Records	11 <b>4</b> 16)
17-43 v Member Detail	ill¶ ❤ ■0 Edit	17:43 <del>v</del> <	WFILOCK	ut 🗢 🖚	09:49 4 < 2022-08-	Records 03 Wed 17:44	玉 中 (16)
17:43 v Member Detail	ilif ♥ ■) Edit	17:43 sf <	WFILOCK	nt! † 🗰 🗠	09:49 √ < 2022-08-	Records 03 Wed 17:44 85-15 ***** 82 Card U	北中中 (東) Hatt
Member Detail	tti 🗢 🛋	1743 <i>4</i> <	WFILOCK	Πι	09:49 √ < 2022-08-	Records 03 Wed 17-44 85-15 ++++ 82 Card 0 17-44 85-15 ++++ 82 Passe	utt 🕈 🗰 Hook
12743 4 Member Dotal 66-18 + + + + + 82 Bes-19 + + + + + + + + Member Detail	tti 🗢 🛋	1743 <i>4</i> <	WFILOCK	Πι	09:49 4 < 2022-08-	Records 03 Wed 17:44 85-15 **** 82 Card U 17:44 85-15 **** 82 Passes 17:43	HT I III
1243 4 Member Detail 8-6-18 ***** B2 Paperfort Uklock manner Uklock seasond Uklock	ttf 💎 🛋 ) Edit 1	943 V C	WFILOCK	Hig 🌧 🖝	09:49 4 < 2022-08-	Records 03 Wed 17:44 85-15 **** 82 Card U 17:44 85-15 **** 82 Passes 17:43 80-15 **** 82 Pages	HT TO ONE
total y Member Detail Sei-18 + + + + + + + Sei-18 + + + + + + + + Sei-18 + + + + + + + + + + + + + + + + + + +	ttf 💎 🛋) Edit	1743 e <	WFLCCK	Hig 🚓 🖜	09:49 4 <sup>7</sup> < 2022-08- 0 0	Records 03 Wed 17:44 17:42 17:43 80-15 **** 82 Peters 17:43 17:42	utt 🕈 💷 Hook Hel Latensk Hel Einbesk
Manher Ostal Menher Ostal Sei-16 avenue 22 Pagerart Uslock Pag	tti 🗢 🛋 Edit	1743 4	WFILOCK	∑ Ni ¢ ■	69449 47 < 2022-08- 0 0 0 0	Records           03 Wood           17:44           00-10 **********************************	utt ♥ MD Hence Hel Untrack
Tr 43 4 Member Oetal Weigen Barnessee Barnessee Member Detail Member	111 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	₩434 < 	WELLOCK	ut 🕈 🗰 🕹	0949 4 < 2022-08- 0 0 0 0 0	Records 33 Wed 17-44 17-44 17-44 17-44 17-45 17-43 17-4 17-43 17-4	HIT TO BE
to da y member dental Sente evente Sente	nt 🗣 🛋 Eat	7434 <	WFLOCK	ut 🕈 🗰 2	6949 4 < 2022-08- 0 0 0 0	Records 33 Wed 17-44 85 1 + + 82 Card to 17-43 86 1 + + 82 Pages 17-43 Monthal Status + 8 Pages 17-43	et utilita a
to 43 4 Member Oedal Go-Ba anne Age Bage State St	ut P C	5434 C	WFLDCK	, na s	0949 4 < 2022-08-	Records 33 Wed 17-44 8-91	<b>₩ • 10</b> 101 101 101 101 101 101
Tr 43 4 Member Oetal Control Control	10 ♥ ■ Edi 1 1	0437 2		ut V n	0949 4 C 2022-08- O O O	Records 33 Wed 17-41 89 H H & C del U 17-43 17-43 Reset U Hold - 48 Age	<b>₩ ♥ ₩0</b> 
to a y Member Detail B-18 + + + + + B-18 + + + + + + B-18 + + + + + + + + + + + + + + + + + + +	et 🕈 💶 i Eat	9437 5 9		an e a c	0949 4 C 2022-08- C O O O	Records 53 Wed 17:44 18:53 **** 82 Paters 17:43 17:42 17:42 17:42 17:42 17:42 17:42	
TD 4 4  Member Detail  Set 18	nt 🕈 🗰	1243 9 K			0949 4 < 2022-08- 0 0 0 0	Records 33 Wed 17:44 16:41	<b>21 € 10</b> 10 100 1 10 100 10
Trada 4 Member Detail Member Detail Memperint Unlock Memory Internet Memory Internet	nt 🕈 🛋	1745 e C		and Loose	0949 4 C 2002-08- O O	Records 33 Yes 34 Yes 3	ut € 100

# Thank you for purchasing this product!

Please keep this manual properly for future use, and the instructions are subject to change without notice.

Please read it carefully before use. The company shall not be responsible for accidents or damages caused by wrong operation.