



User Manual

8076-FMT-ZWAVE

Performance parameters

| 名称 | 参数描述 |
|----------------------------|--------------------------------------|
| Unlock way | code, card, key, zwave command |
| Master code | 1pc |
| User code capacity | 100pcs |
| Card user capacity | 100pcs |
| Card read distance | ≤15mm |
| Working voltage | 4xAA Alkaline batteries (DC4.8-6.5V) |
| Low voltage alarm | 4.8 ± 0.2v |
| Static status current | 80-200uA |
| Working current | 200mA |
| Working temperature | (-20°C-55°C) |
| Storage temperature | (-30°C-70°C) |
| Mean time between failures | ≥25000h |
| Record capacity | 240pcs |

Operation Guide

1. Keypad instructions

- * Press "0-9" on front panel for codes
- * Press "*" on front panel for return or deletion
- * Press "#" on front panel for confirmation
- * "Reset" button on back panel under the battery case

2. Unlocking mode


- * It can be unlocked by code, card, zwave command through APP, card + code and back up metal key

3. code, card user capacity


- * Master code: 1pc (4-6 digits, the default master code is 123456)
- * Code user: 100pcs (4-6 digits, index no. 001-100),
- Card user: 100pcs (index no. 001-100)

4. Door lock setting introduction

4.1. Change Master Code

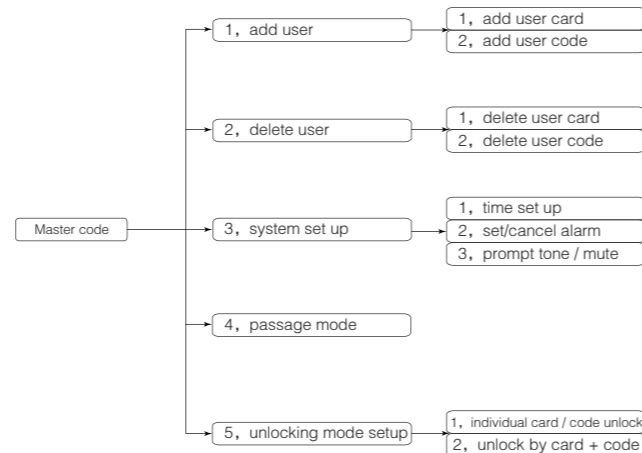


Change the default master code

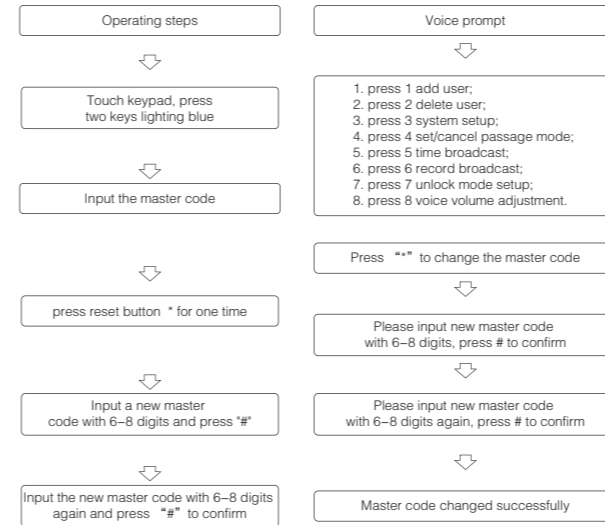


- * Card, code can only be added after the factory default master code modified.
- * New master code should be different with the default master code.
- * When modify default master code, the first input code should be same with the second input code.

4.2 Add User Card

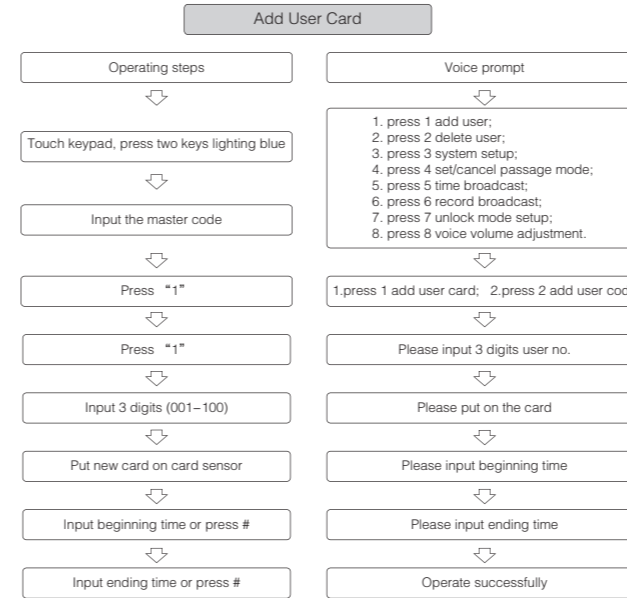


- * In the card adding status, you can add more card users continually.
- * If you don't want card user with time restriction, please don't input time, press "*" directly.

4.3 Add User code

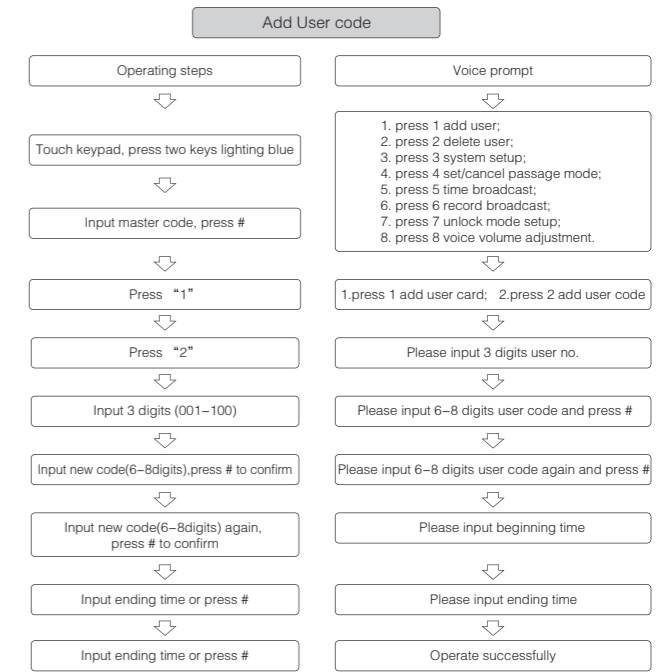


- * In the user code adding status, you can add more code users continually.
- * If you don't want code user with time restriction, don't input time, press "*" directly.

4.4 Delete User Card

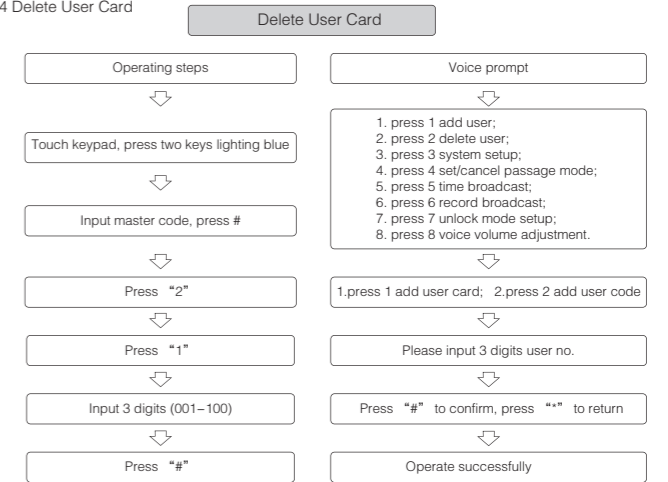

- * In the card deleting status, you can delete more card users continually.


4.5 Delete User code

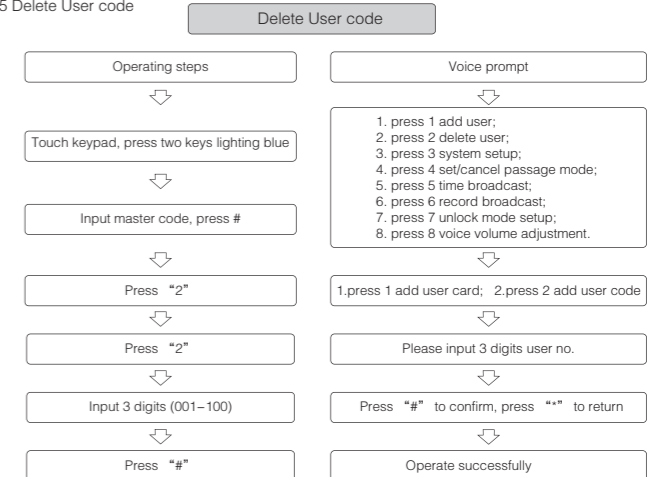

Before installing and using this product, please read it carefully and save it for future reference.
This product meets the general technical requirements of electronic anti-theft lock GA 374-2001 fingerprint anti-theft lock GA 701-2007.


Rev.1/03/2020

Packing list

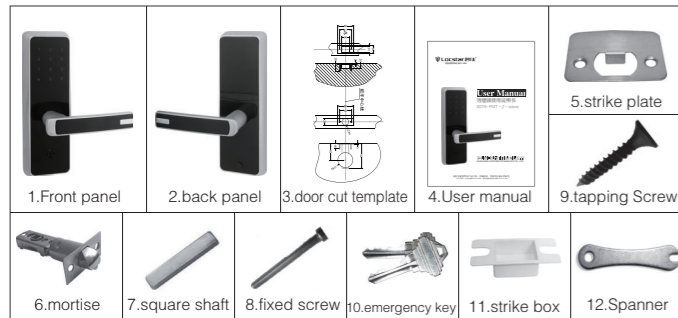

5. Door lock setting introduction


5.1, Change default master code

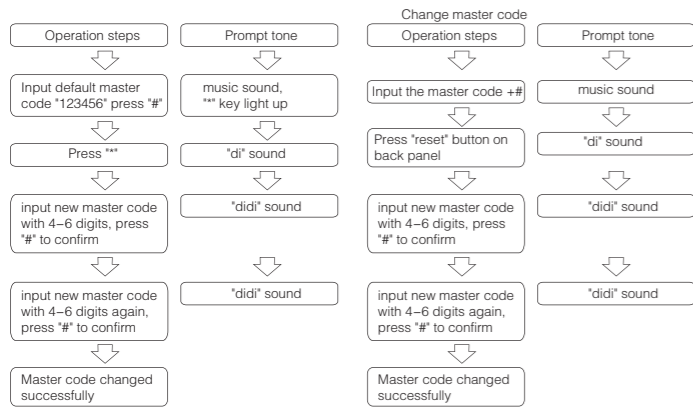

*The new master code can't be set up same as the default master code
*Please change the master code first, or not able to enter to the next step


5.2 add user

5.21 add user card

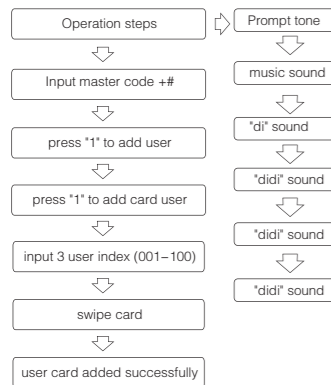

*user card: 100pcs (index no.001-100)
*In the card adding status, you can add more user cards continually
*the user card's validity is 100 years from current registered time


5.22 add user code

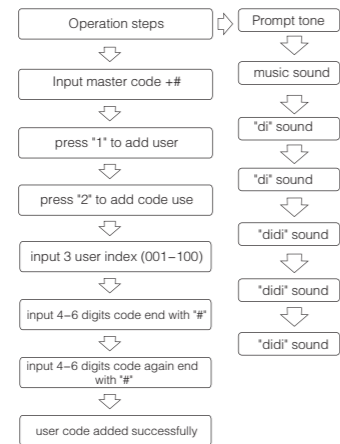


*user code: 100pcs (index no.:001-100)
*In the code adding status, you can add more user codes continually
*the user code's validity is 100 years from current registered time

5.3 Delete user

5.31 Delete user code

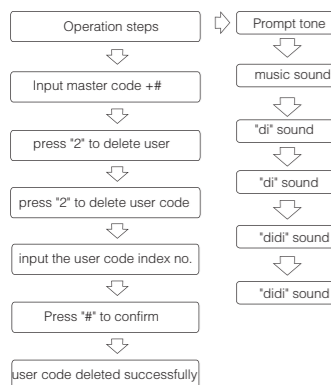


5.32 Delete user card

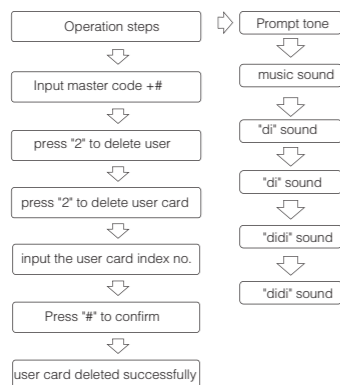

Note: Press '#' to confirm to delete, press '*' to return and to give up to delete.


6. Unlocking operation

6.1 Code unlocking prompts

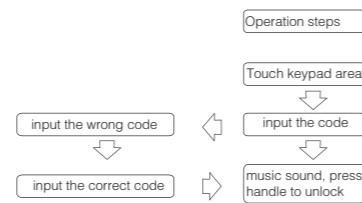


Note: master code / user code should be 4 digits or 6 digits, or the input is invalid

6.2 Card unlocking prompts

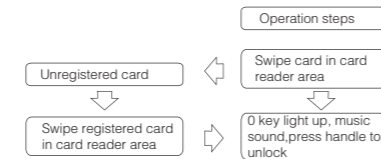


6.3 Chinese/English voice navigation switching

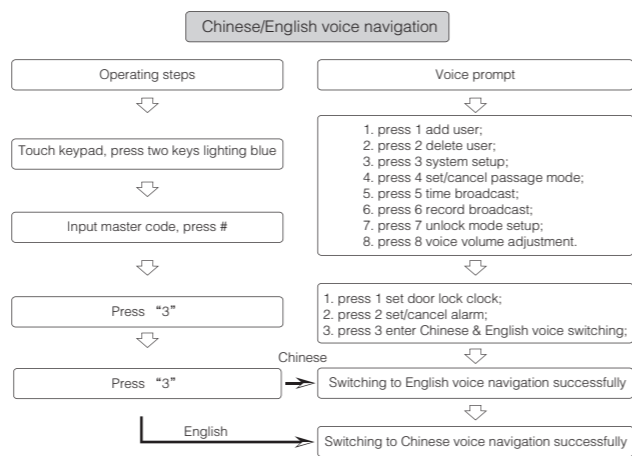


7. System set up


7.1 Time Set-up

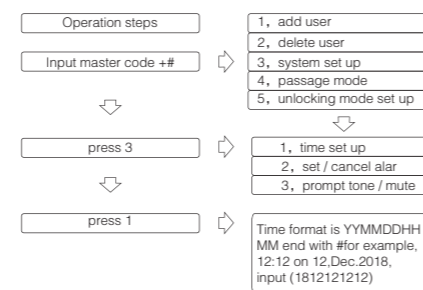

7.2 set / cancel alarm

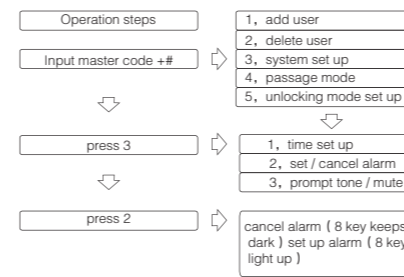


7.3 set / cancel alarm

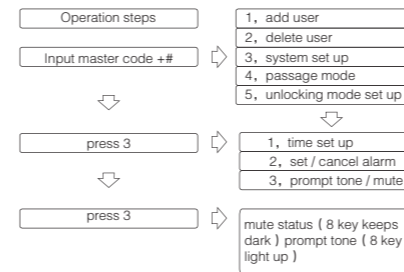


Note: Please register the card / code user first before set up the unlocking mode

8. Passage mode set up

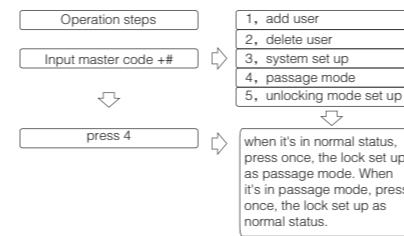

* The battery consumes more fast in passage mode

9. Unlocking mode set up

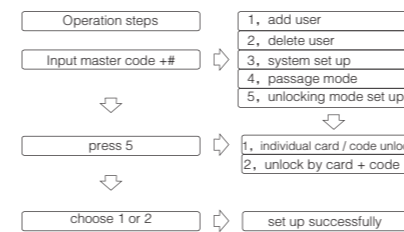


Note: Please register the card / code user first before set up the unlocking mode

10. Enroll the zwave lock on the zwave gateway



Note: after input the master code end with #, press 0 twice to enter into the zwave pairing mode, wait for several seconds, the lock sound 'didi' means the zwave lock is deleted successfully. Press 0 twice again, the zwave lock will sound 'didi' for pairing successfully. if it sound 'di' only, it means the setup is failed.

11. factory default setting

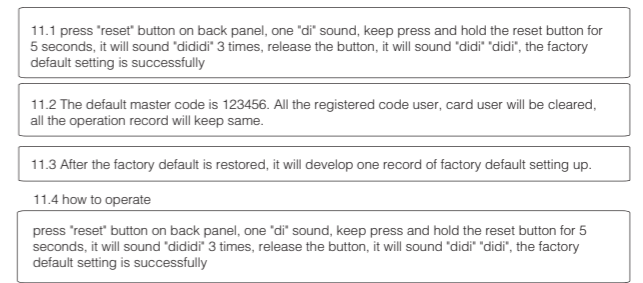


12. Restore factory defaults setting



Notes:
• After the default master code is restored, it must be changed before user adding or deletion.
• After factory defaults are restored, the previously user cards/user codes will be deleted .

 13. Low battery alarm and how to change the battery



14. External power contact

4 pieces AA Alkaline battery(6V), when battery voltage is lower than 5.0V, the door lock will sound a voice prompt "Low battery. Replace it" .

15. Battery box & reset button



16. External power contact

